



Drift HD 720 LCD Screen Replacement

Replacing the screen of your Drift HD 720 can get your device back to normal if the screen is malfunctioning.

Written By: Hector Rodriquez



INTRODUCTION

If your device seems to be turning on but the screen isn't displaying anything, you may be able to fix the issue by replacing the screen.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [replacement LCD screen](#) (1)

Step 1 — Battery



- Unscrew the back plate counterclockwise until it comes off.

Step 2



- Push the black battery tab next to the battery to get the battery out.
- Remove the battery.

Step 3 — LCD Screen




- Remove six 8mm long Philips head screws with the J0 Philips head from the outer case.

Step 4




- Remove the back case from camera body.

Step 5

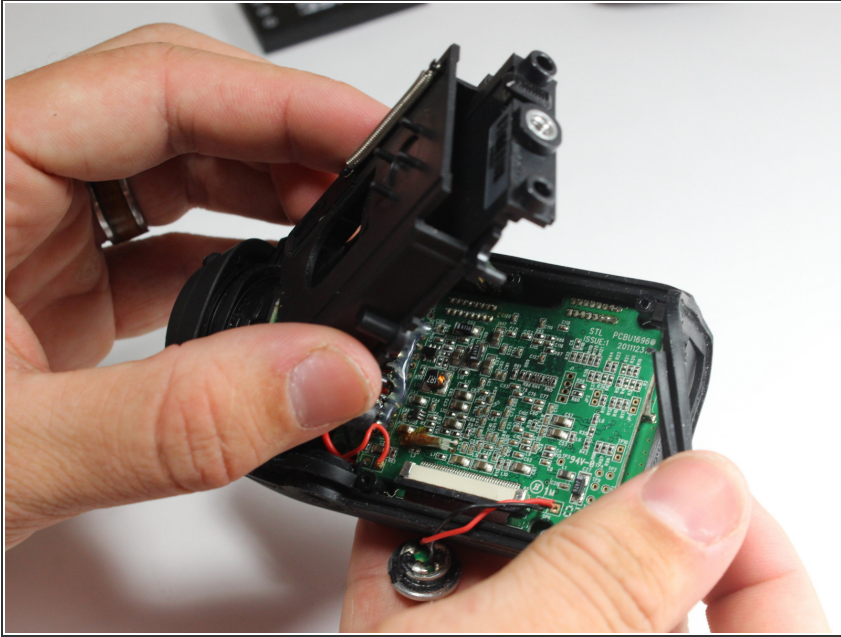

- Carefully remove the battery housing from the camera body.

Step 6

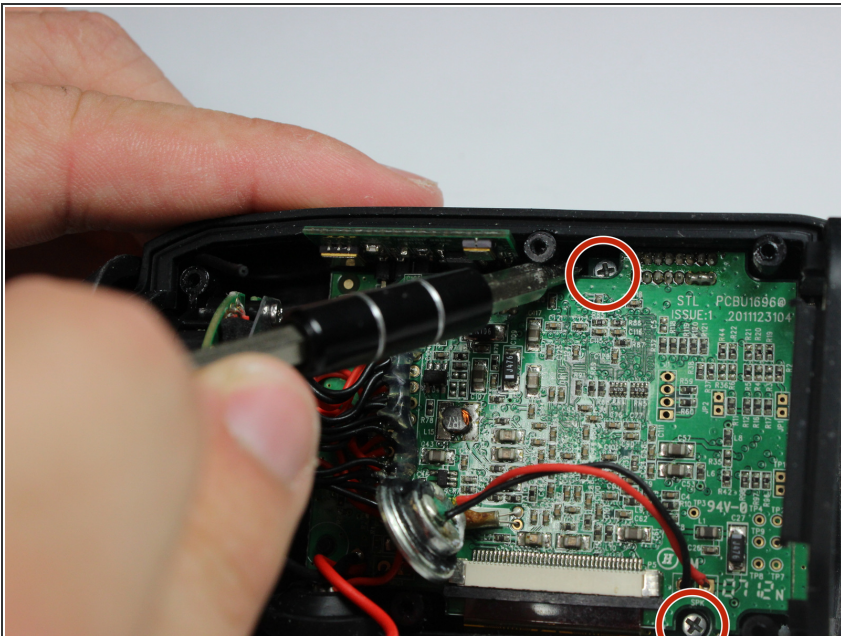


- Use J0 Phillips head to remove two 6mm long Phillips head screws from the motherboard.

Step 7




- Remove the motherboard (green) from the front case housing.

Step 8

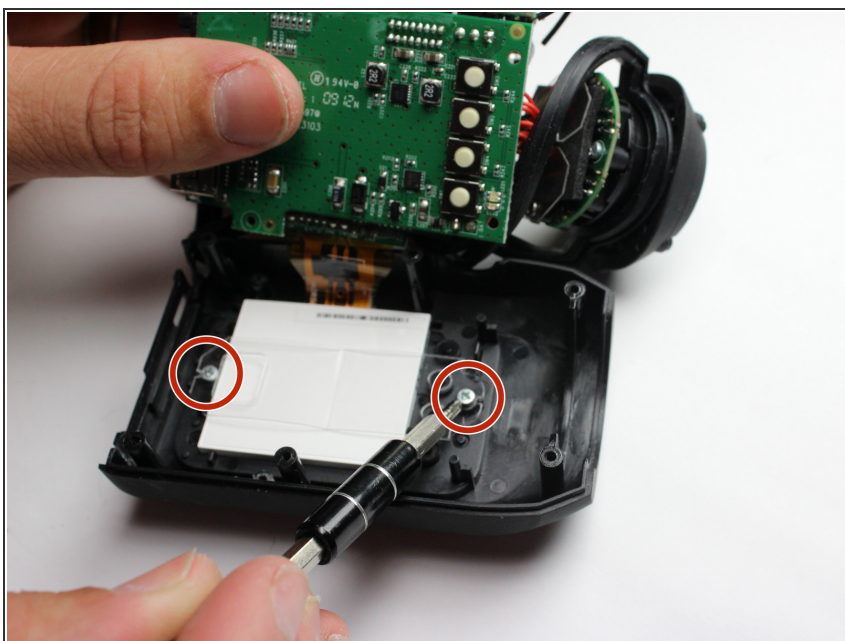


- Use the J0 Phillips head screws to remove two 5mm long Phillips head screws from the plastic bracket holding LCD in place.

Step 9

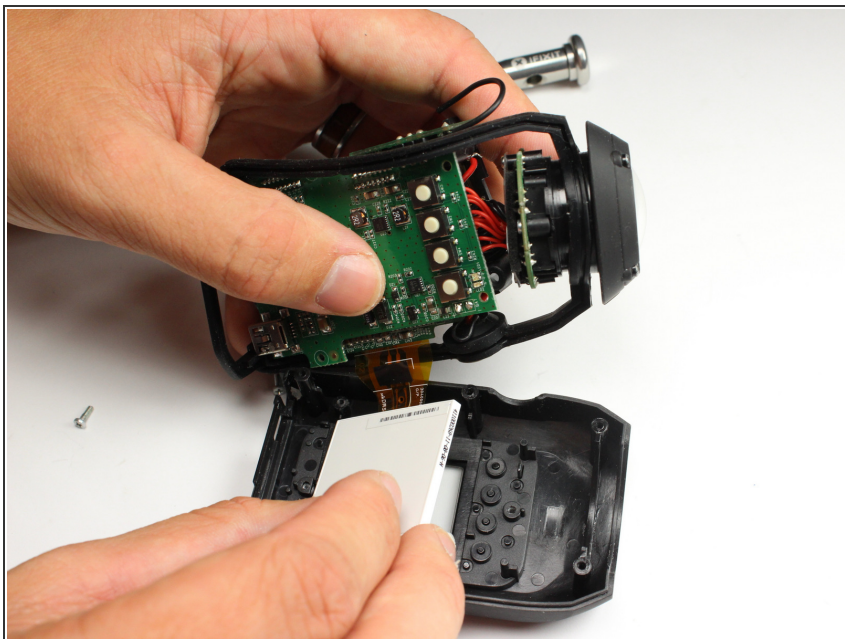


- Remove the LCD screen from the front cover.

Step 10

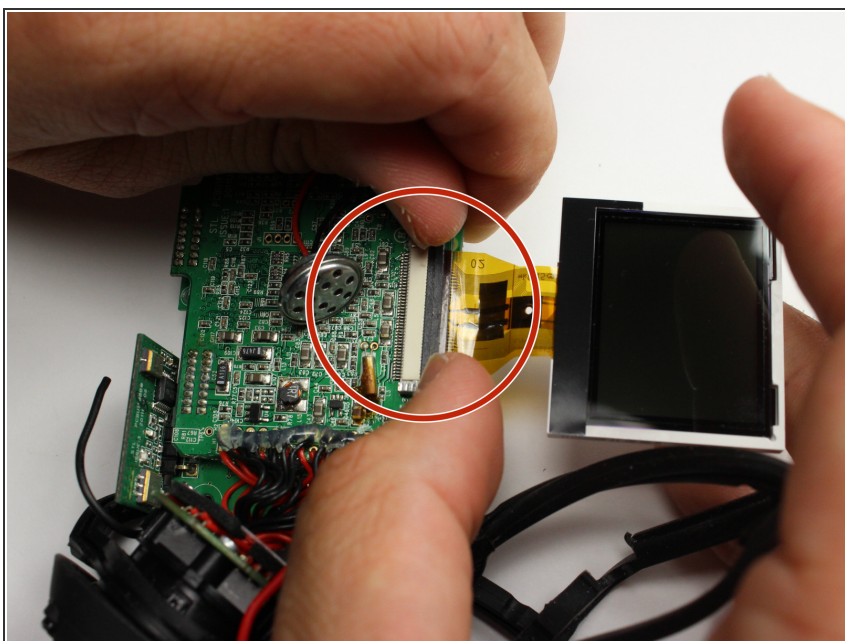

- Slide the black bar toward the LCD screen in order to remove the screen from slot.

Step 11

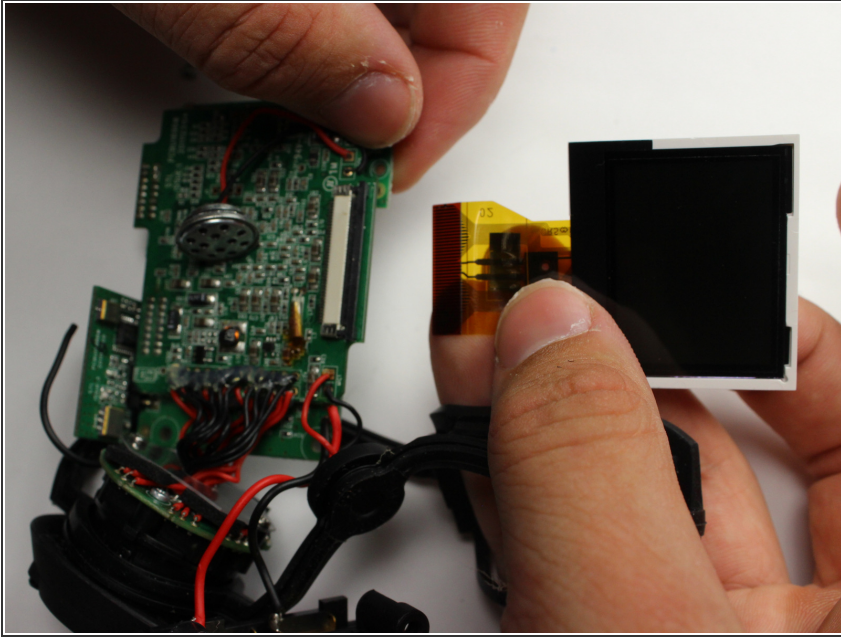

- Remove the LCD from motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-05 05:01:21 AM.